
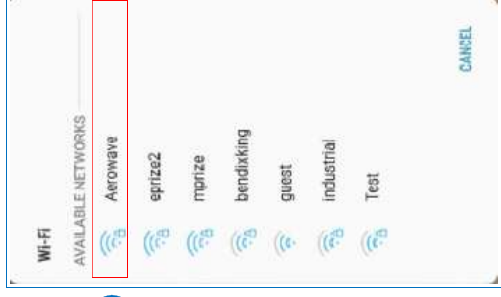
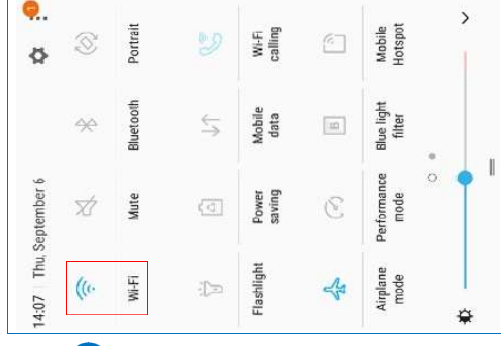


CONNECT AN ANDROID™ DEVICE FOR DATA

- 1 Go to **Settings** ➡ turn on **Airplane mode**
- 2 Turn on **Power saving mode**
- 3 Ensure **Background network usage** is turned off
- 4 Turn on **Wi-Fi**



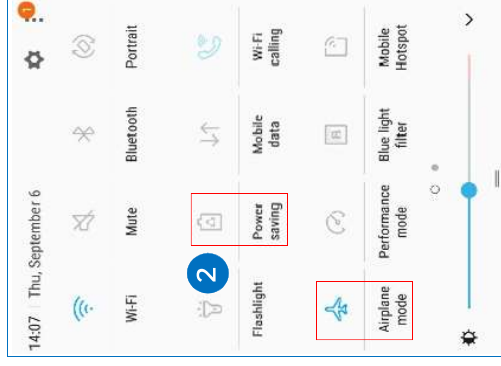


To check the system status, visit 172.16.1.1 on your browser. Click the LAN tab to check if a device is using more bandwidth than expected.

Optional: You can also turn on **Data saver** under **Data usage** options to limit background data.

CONNECT AN ANDROID DEVICE FOR PHONE CALLS (WITH OPTIONAL VOICE ROUTER)

- 1 Connect to **Aerowave** Wi-Fi network
- 2 Launch a SIP application (CSipSimple recommended)
- 3 Deselect **Integrate with Android** under **Easy configuration**
- 4 Select **Always available** ➡ press **Save**
- 5 Select **Basic** under **Choose wizard**
- 6 Enter **01** for User ➡ press **OK** (second user should use 02)
- 7 Enter **172.16.1.1** for Server ➡ press **OK**
- 8 Enter password (chosen by user, min. 6 characters) ➡ press **OK**

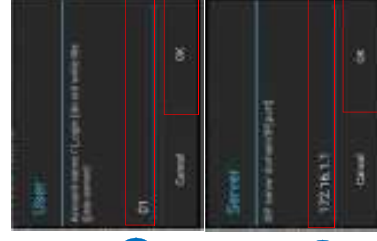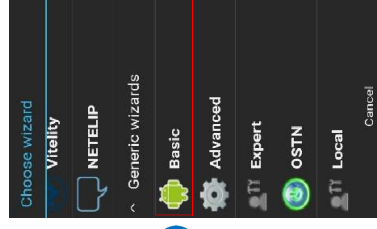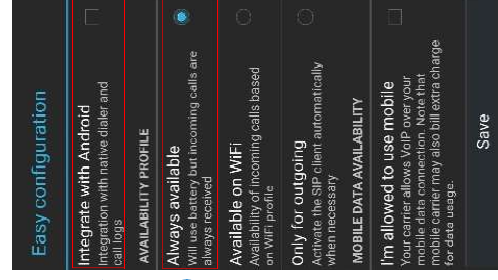

To place a call use **Dialer**.

Call examples: US 12345678901, International +41411234567

To receive calls, provide the caller with the unique international Inmarsat™ phone number associated with the aircraft tail-number (see the Activation Report).






NOTE: Calling an Inmarsat phone number may cost \$6-\$9 per minute (check with the plan provider).

AeroWave Tips

- Limit number of connected devices to 4
- Avoid using VPN, Dropbox, or cloud storage (iCloud®, etc.)
- If the system is unresponsive have the pilot check the power to the system and cycle as necessary
- Streaming and social media are blocked
- Use data messaging (iMessage® (blue), Google Messages). Cellular texting (iMessage (green), SMS) do not work
- Apps are recommended instead of web-based interfaces
- Contact techsupport@Bendixking.com to report any problems

CONNECT AN iOS® DEVICE FOR DATA

- 1 Go to **Settings** ➡ turn on **Airplane Mode**
- 2 Select **Battery**
- 3 Turn on **Low Power Mode**
- 4 Turn on **Wi-Fi**
- 5 Connect to **AeroWave** Wi-Fi network ➡ enter password, if needed

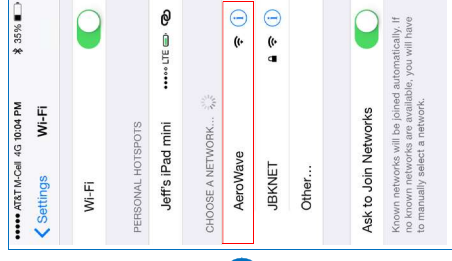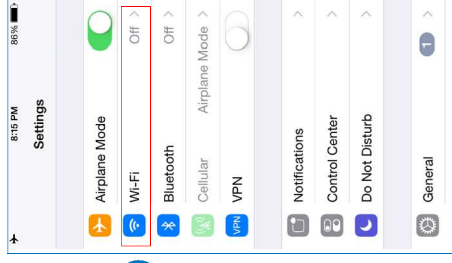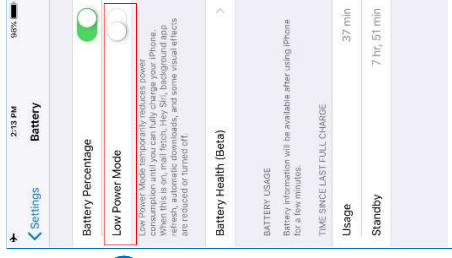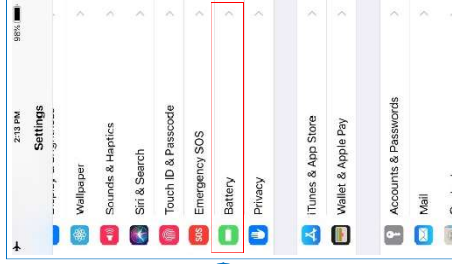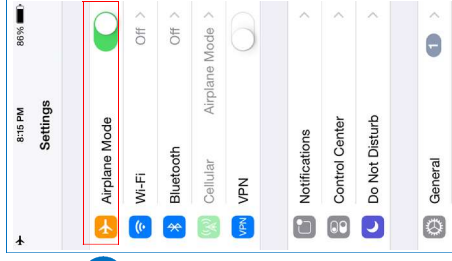

To check the system status, visit 172.16.1.1 on your browser. Click the LAN tab to check if a device is using more bandwidth than expected.

CONNECT AN iOS DEVICE FOR PHONE CALLS (WITH OPTIONAL VOICE ROUTER)


- 1 Connect to **AeroWave** Wi-Fi network
- 2 Launch a SIP application (Linphone recommended)
- 3 Select **Assistant** from the Main Menu
- 4 Select **USE SIP ACCOUNT** Under Assistant
- 5 Enter **01** as Username (second user should use 02)
- 6 Enter password (optional)
- 7 Enter **172.16.1.1** for Domain
- 8 Select **UDP** as Transport
- 9 Press **LOGIN**
- 10 Select **Maybe Later** when asked to Link Your Account

To place a call use **Dialer**

Call examples: US 12345678901, International +41411234567

To receive calls, provide the caller with the unique international Inmarsat phone number associated with the aircraft tail-number (see the Activation Report).

NOTE: Calls to an Inmarsat number may cost \$6-9 per minute (check with the plan provider)

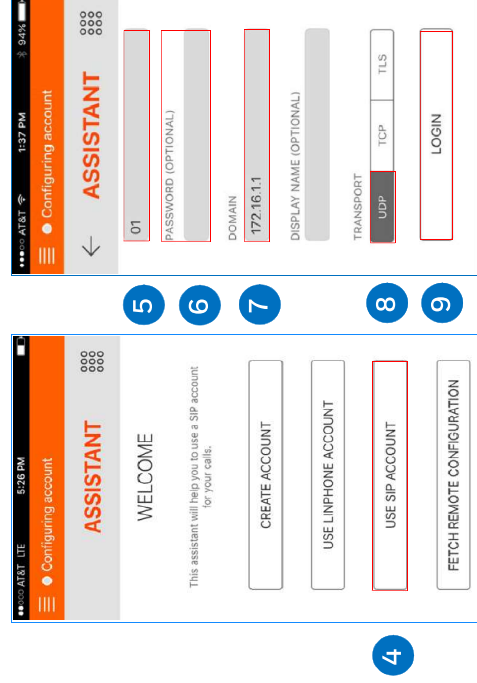

AeroWave Tips

- Limit number of connected devices to 4
- Avoid using VPN, Dropbox, or cloud storage (iCloud®, etc.)
- If the system is unresponsive have the pilot check the power to the system
- Apps are recommended instead of web-based interfaces and cycle as necessary
- Streaming and social media are blocked
- Use data messaging (iMessage® (blue), Google Messages). Cellular texting (iMessage (green), SMS) do not work
- Apps are recommended instead of web-based interfaces
- Contact techsupport@Bendixking.com to report any problems